



DIGITAL VIDEO / MUSIC PLAYER
MP3/WMA/AMV

USER MANUAL

MP-CS155

www.mpmaneuropa.com

Before connecting, operating or adjusting this product please read these instructions completely.

UP TILL 99 SONGS IN ONE DIRECTORY

YOUR MP-CS155 ACCEPTS

UPTILL 99 SONGS IN ONE DIRECTORY

IF YOU WANT MORE THEN 99 SONGS,
STORE THEM IN A NEW DIRECTORY
IN PLAY MODE, YOU CAN CHANGE THE DIRECTORY
IN THE MENU.

DON'T FORGET: MAXIMUM 99 SONGS IN EACH DIRECTORY

1.1The player characteristics

- ▲ MP3 / WMA music format.
- ▲ AMV movie format
- ▲ JPEG picture format
- ▲ 65K full color display
- ▲ Voice recorder
- ▲ GUI (graphical user interfaces).


The box:

- | | |
|---------------------|------|
| (1) MP3 player | 1Pcs |
| (2) Stereo earphone | 2Pcs |
| (3) CD ROM | 1Pcs |
| (4) Quick guide | 1Pcs |
| (5) USB cable | 1Pcs |
| (6) Charger | 1Pcs |

PC needs

- (1) Pentium 100 MHz or faster
- (2) Windows 98/2000/ ME/XP
- (3) USB port
- (4) CD- ROM driver
- (5) 15MB of free space on harddisk
- (6) 32 MB RAM

1.2 The player appearance interface

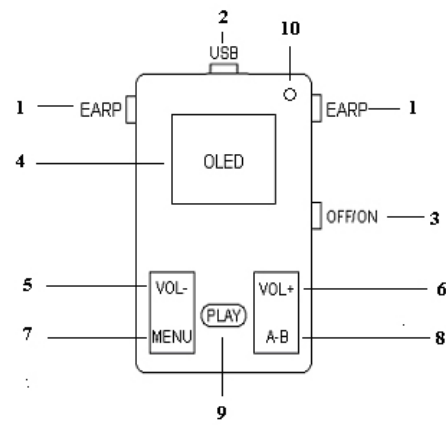

1.3 Figure & Keys

- 1) Earphone jack,
- 2) USB Port
- 3) Power ON/OFF,
- 4) 65 K color display
- 5) Previous, Vol-
- 6) Next, Vol+
- 7) Menu
- 8) A-B recording
- 9) Play/pause
- 10) Microphone

1.4 Display

65000 colors OLED display

1.5 Battery

The screen shows a battery indicator with nine levels.

The battery is full when the battery voltage is 1.5V.

The battery indicator will be empty when the battery is used up. At that time, the player should be charged with an external charger(optional) or with the USB connection on your PC

2 Operating instruction

2.1 Turning on/off the MP3 player

Slide ON/OFF switch to the right. The OLED display will light up.
Slide ON/OFF switch to the left. The MP3 player will shut off.

2.2 Main menu

Press the "Menu" button for several seconds, from any point in the menu, and the player returns automatically back to the main menu.

Six options:

- 1) MUSIC
- 2) MOVIE
- 3) RECORD
- 4) VOICE
- 5) JPG VIEW
- 6) SETTING

You can switch between options by pushing "Next/Vol+" or "Prev/Vol-" button. Then press shortly on the "Menu" button to enter the submenu or to confirm a function.

2.3 Changing volume

First you enter any submenu (music, voice, movie), then press and hold "A-B" button for several seconds until the volume indicator appears on the screen. Now adapt the volume with the Vol-/Vol+ buttons.

2.4 MUSIC

Select "Music" mode in the main menu, by pressing once the "menu" button.

To enter any music submenu options press once the "menu button"

There are 2 different types of submenu

A/ In stop mode (not available in playback)

B/ In play mode (during playback)

2.4.1 In stop mode (not available during playback)

Press "Menu" button once to enter the music submenu.

Three options are available:

- Local Folder
- Delete
- Repeat
- Exit

Select and confirm your choice by pushing menu button.

2.4.1.1 Local folder (not available during playback)

Here you will be able to find the files stored in different folders.

On the root folder or in any other folder you have created in Windows.

To create new folders in Windows explorer when MP3 is connected.

Open "external drive".

Create new folder

- Press "Menu" button to open Local folder
- Press "Next" or "Prev" button to select the catalog
- Press "Menu" button to confirm

2.4.1.2 Delete (not available during playback)

In the "delete file submenu, by pressing once the "menu" button, you will get a list with all songs available in the respective folder.

By pressing once again "menu" button, you will be able to access the following

- Exit
- Delete file
- Delete all

2.4.1.3 Repeat

Normal	All songs are played once
Repeat One	Repeats the current song
Folder	Plays all the music of a specific folder
Repeat Folder	Repeats the music of a specific folder
Repeat All	Repeats all the music.
Random	Plays music at random.
Intro	First 10 seconds of each song is played.

2.4.2 In play mode (available only during playback)

During playback, press "Menu "button to enter "Play submenu ":

Six options:

- Repeat
- Equalizer
- Tempo Rate
- Replay
- Replay times
- Replay gap
- Exit

Select and confirm your choice by pushing menu button.

2.4.2.1 Repeat

Normal	All songs are played once
Repeat One	Repeats the current song
Folder	Plays all the music of a specific folder
Repeat Folder	Repeats the music of a specific folder
Repeat All	Repeats all the music.
Random	Plays music at random.
Intro	First 10 seconds of each song is played.

2.4.2.2 Equalizer

 
Seven options:

- Natural
- Rock

- Pop
- Classic
- Soft
- Jazz
- DBB

Select and confirm your choice by pushing menu button.

2.4.2.3 Tempo Rate



The music can be played faster or slower (only with MP3 files)
Change the rate by Pressing "Next/Vol+" or "Prev/Vol-" button .

Confirm your choice by pushing menu button.

2.4.2.4 Replay times

Here you are able to choose how many times (1-10) the A-B section will be repeated.

2.4.2.5 Replay gap

Choose the time(1-10 sec) between each A-B section.

2.4.2.4 Replay mode (available during playback)

A-B replay



When replay mode is selected, the A-B icon is visible.
Select the start point A (flashing) by pressing "Next/vol+" button.
Select the end point B(flashing) by press "Next/vol+" button .
The A-B section will be repeated continuously
Press "Menu" button to return to normal playback

- Adding your voice to the A-B section
During playback of the A-B section, by press "F.FWD" >>| button



The microphone icon appears and your voice is recorded.
Press "Menu" button again to stop the recording.
The A-B section + the voice recording will be repeated

2.5 **MOVIE**

In this mode you can view your AMV movies.

Don't forget to convert your movie files into AMV format so your MP-CS155 can play it!

A converter is available on the CDROM

Simply copy the movie files
to the unit (cfr music files).
Select in the main menu "Movie".
Select a file.
Press Play button for movie playback
Press forward button to display the next movie

2.5.1 Movie stop submenu (no menu available during playback)

Press menu button to enter submenu

- Local folder: cfr 2.3.1.1
- Delete: cfr 2.5.1.2
- Repeat: cfr 2.3.1.3
- Exit

2.6 RECORD

-Select "Record mode " in the main menu.
The unit can store up to 99 recordings in each folder.

- Press "PLAY" button to start recording.
- Press "PLAY" button again to pause the recording (Time flashes).
- Press "PLAY" again to continue recording.
- Press and hold the "PLAY" button to stop recording.

2.6.1 Record submenu

In the Record mode, press menu button once

3 options:

- Local folder
- REC type
- Exit

2.6.1.1 Local folder

cfr 2.3.1.1

2.6.1.2 REC type

Four options:

- "Fine REC": high quality recording, wav format, good quality.
- "Long REC": lower quality recording, act format, uses less space
- "Fine VOR": wav format
- "Long VOR": act format

When using "VOR recording", the player enters into the state of "pause recording" if no sound is detected by the microphone. Recording starts again when sound is detected.

2.7 **VOICE**

In this mode you can listen to the recordings created in "Record mode"
Select in the main menu "Voice mode".

2.7.1 Voice stop submenu (not available during playback)

When playback is stopped, press "Menu" button to enter the Voice submenu.

3 options:

- Local folder
- Delete file
- Exit

2.7.1.1 Local folder (not available during playback)

cfr 2.4.1.1

2.7.1.2 Delete file (not available during playback)

Select a file and push menu button.

By pressing "menu" button you get a list of recorded files.

By pressing again the "menu" button you get:

- Exit
- Delete file
- Delete all

2.7.2 Voice play submenu (available during playback)

During playback, press "Menu" button to enter the Voice play submenu.

- 4 options:
- Repeat
 - Tempo rate
 - Replay
 - Exit

Those options are similar to the music play submenu

2.8 JPG View

In this mode you can view your JPEG pictures. Simply copy the pictures to the unit (cfr music files)

Select in the main menu "JPG view "

Press Play button for picture playback

Press forward button to show the next picture

2.8.1 JPG VIEW submenu

Press menu button to enter submenu

- Local folder: : cfr 2.4.1.1

- Play set: select manual or auto play

- Delete picture: cfr 2.6.1.2

- Exit

2.9 SETTINGS

Select "System" in the main menu

- Clock
- LCD set
- Language
- Power off
- Replay mode
- Memory info
- Firmware version
- Exit

Press menu button to select.

2.9.1 Clock

Enter here the correct date and time.

Change the year number by using "Next/Vol+" or "Prev/Vol-" button.

Press the Menu button and the month-number will be indicated.

Change the number by using "Next/Vol+" or "Prev/Vol-" button

Press again "Menu" button and the days will be indicated....

2.9.2 LCD set

Adjust the brightness (0-15), darkle(0-30), black (0-30),
by pressing "Next/Vol+" or "Prev/Vol-" button
Press Menu Button to confirm or choose exit to quit

2.9.3 Language

Change the language by pressing "Next/Vol+" or "Prev/Vol-" button
Press Menu button to confirm.

2.9.4 Power off

- Off time

With this function the device will automatically shut down after a preset time.(0-60sec), when no button is touched and music is not playing.
If time is set at 0 seconds, the function is cancelled.

- Sleeping mode

With this function the device will always shut down after a preset time (0-120 min).
If time is set at 0, the function is cancelled.
When the device is powered off, sleeping mode is set at 0.

2.9.5 Replay mode

Manual replay or auto replay

2.9.6 Memory info

Gives a percentage of the memory used compared to the total memory size

2.9.7 Firmware version

2.9.8 Exit

3.1 **SPECIFICATIONS**

(1) <i>FLASH Memory</i>	<i>256MB, 512MB, 1GB, 2GB</i>
(2) <i>Formats supported</i>	<i>MP3, WMA, JPEG, AMV</i>
(3) <i>Languages</i>	<i>English, French, Italian, German, Spanish, Swedish, Dutch, Russian, Portuguese.</i>
(6) <i>Power supply</i>	<i>3.8v Rechargeable Lithium battery</i>
(7) <i>USB2.0</i>	<i>Read 1033K Byte/S Write 955K Byte/S</i>
(8) <i>recording</i>	<i>WAV (32K bps), ACT (8K bps)</i>
(9) <i>frequency response</i>	<i>20Hz~20KHz</i>
(10) <i>distortion</i>	<i>< 0.1%</i>
(11) <i>baud rate</i>	<i>> 4Mbps</i>
(12) <i>weight</i>	<i>38g</i>
(13) <i>size</i>	<i>81mm x 42mm x 11mm (L x W x D)</i>

3.2 Troubleshooting

If for any reason your player is blocked, you can reset the firmware
You just have to switch it off and back on. Reset is automatic at startup.

FOR MORE INFORMATION DO NOT HESITATE TO VISIT
OUR WEBSITE
www.mpmaneurop.com